




ASEPTICAN™ CM2

User Manual

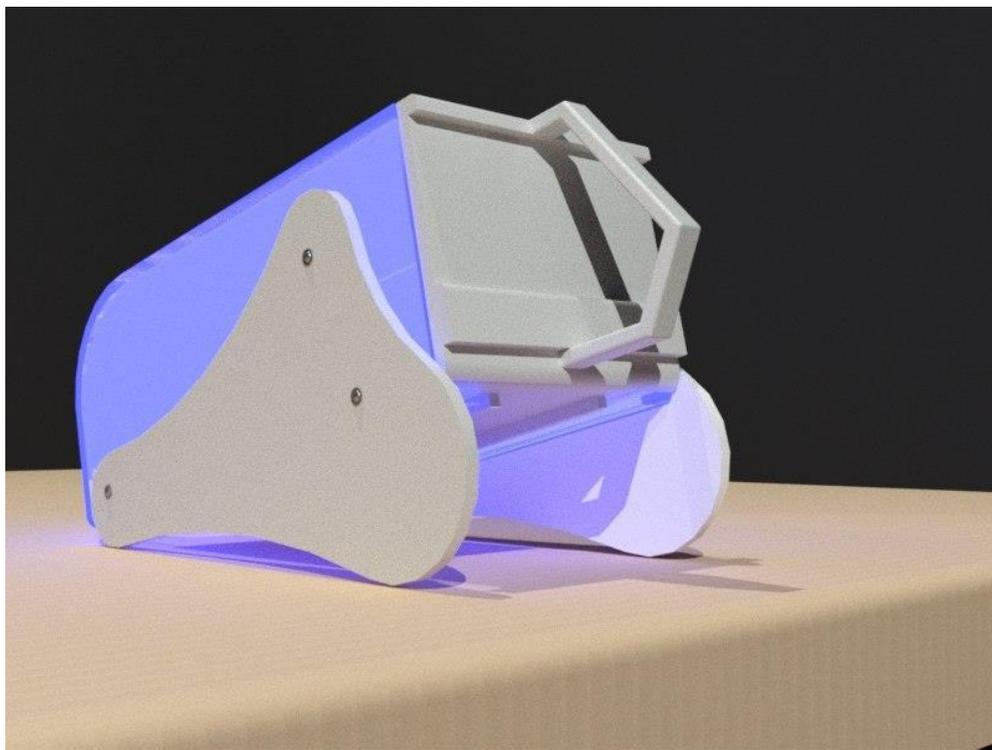

ASEPTICAN is Trademark and Patent of Robonomist Inc. All rights reserved

Rev. 1.0

Thank you for purchasing the ASEPTICAN™ CM2. This user manual contains important safety and device information that should be read prior to use.



The above symbol indicates safety and device use messages in this manual. Failure to properly set up, use and care for the CM2 can increase the risk of serious injury or death, or damage to the unit. Read this manual for important safety and health information. Keep this manual for future reference. For a replacement user manual, or to see the most updated version, go to ASEPTICAN™.ca/manuals, or contact Robonomist Inc. customer support at 416-821-3733. Read the complete manual for important safety and device use information.

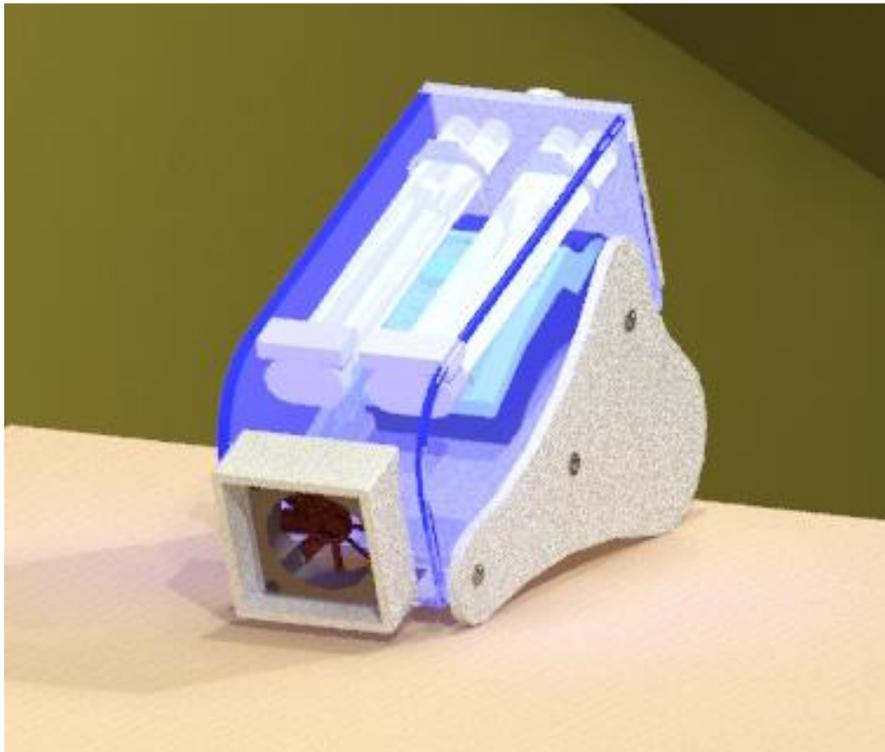


TABLE OF CONTENTS

1. Product Specifications
2. Product Warnings
3. Safety Instructions
4. Setup Instructions
5. Getting Started and Initiating a Disinfection Cycle
6. Limited One Year Warranty
7. No Other Warranties
8. Warranty Service
9. How to Obtain Warranty Service?
10. Limitations on Warranty Service

PRODUCT SPECIFICATIONS

Device Size: 39.5 cm. (W) X 13.6 cm. (D) X 26.6 cm (H)

Weight: 1.6 Kg/3.5 lb

Capacity: 29 cm. Width X 11 cm. Depth X 10.5 cm Height

Maximum Item Height: 1.8in


UV-C Disinfection Lamp Life: 10,000 cycles.

Power Input: 100-240 Vac, 50-60hz.

Power Consumption: 50w maximum during disinfection cycles.

Includes: Enclosure with shelf, AC power cable, user manual.

Disinfection Cycle Time: 20 to 30 seconds, depending on dosage, if you want to change the timer contact ASEPTICAN™ technical service department to get assistant.

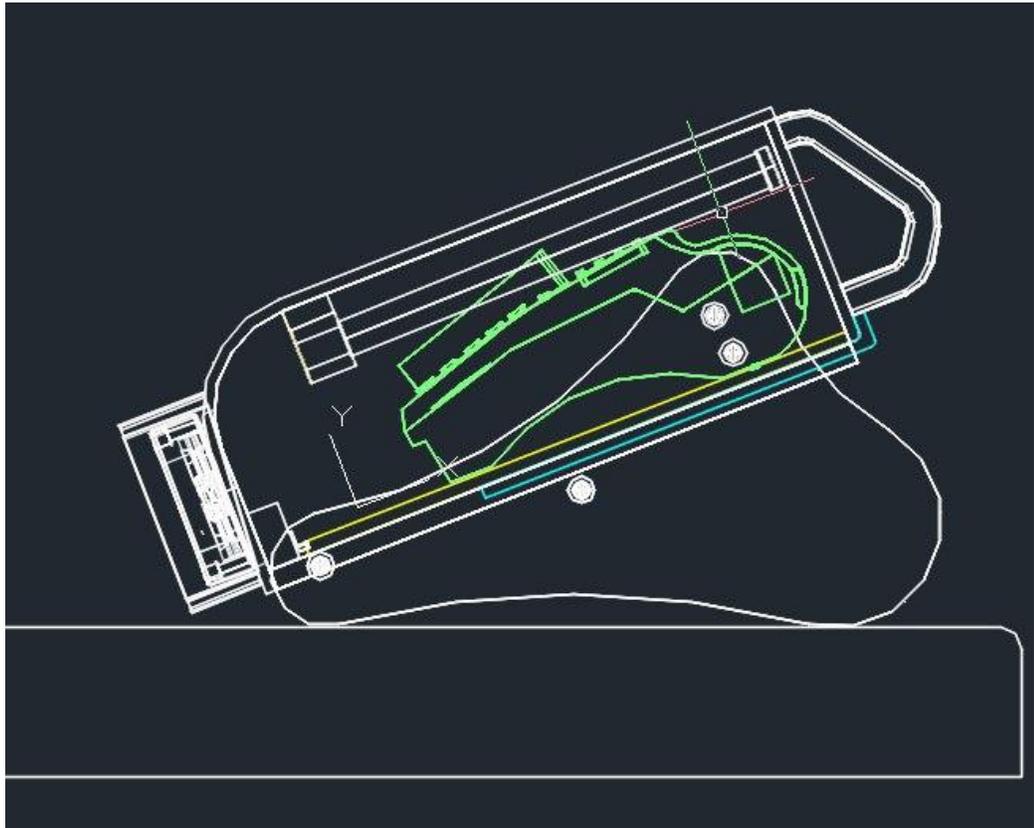

Product Warnings



WARNING!

DANGER OF ULTRAVIOLET RADIATION!

Radiation of this lamp is dangerous to eyes and skin.

Ultraviolet (UV-C) Radiation Hazard. Any exposure to the UV-C will cause significant eye damage and may cause skin damage. If direct light from the UV-C lamps inside the enclosure is visible, remove power and stop using immediately, and contact Robonomist Inc. for assistance.



Product contains Mercury. Manage properly

Safety Instructions



WARNING: To guard against injury, basic safety precautions should be observed, including the following:


1. Read and save all notices, warnings and safety instructions received with equipment.
2.    **WARNING** Avoid exposure to direct or reflected germicidal ultraviolet rays. Germicidal ultraviolet rays are harmful to the eyes and skin.
3.  **WARNING** Always disconnect power to the equipment and unplug before performing any service or maintenance.
4.  **CAUTION** Do not operate without proper electrical ground.
5.  **DANGER** To prevent the risk of severe or fatal electrical shock, special precautions must be taken. Equipment should be plugged into an approved Ground Fault Circuit Interrupt (GFCI) receptacle.
6. Most equipment is intended for indoor use only.
7. Do not alter the construction or design. Do not remove safety labels or devices
8. Do not use equipment for other than its intended purpose, as described in the equipment manual.
9. On equipment with blowers keep inlet and outlet vents, clean and clear of objects.
10. **CAUTION** Germicidal ultraviolet rays may break down plastic, rubber, or other non metallic materials, can fade colors, and can be damaging to plant life over time.
11. Do not operate equipment if the power cord and/or plug are damaged, or if any other damage to the unit is visible or suspected.
12. Utility power must match power requirements listed on the unit label.
13. Equipment should be protected from the elements and from temperatures below freezing.
14. Equipment should be used in a stable location that is dry and free from liquid incursion.
15. Do not exceed equipment's maximum rated flow capacity and/or operating pressure.

SETUP INSTRUCTIONS

1. Open the ASEPTICAN™ CM2 packaging and inspect the product visually to make sure there is no damage.
2. Read the user manual carefully to avoid harm to the product or to yourself and to understand how to use the product properly.
3. Unpack the main CM2 Unit.
4. Unpack the provided AC power cord.
5. Install two or one UV-C bulb into 2G11 socket on top of the enclosure, make sure its fully engaged



6. Plug the AC power cord into the back-panel AC power socket of the unit and then plug the other end into an AC power source. The unit will power on automatically.
7. The enclosure of the CM2 is designed to support up to 30lbs.
8. Wait for the green LED to illuminate and sequence through its start-up.
9. The unit will be ready to use once its plugged-in.

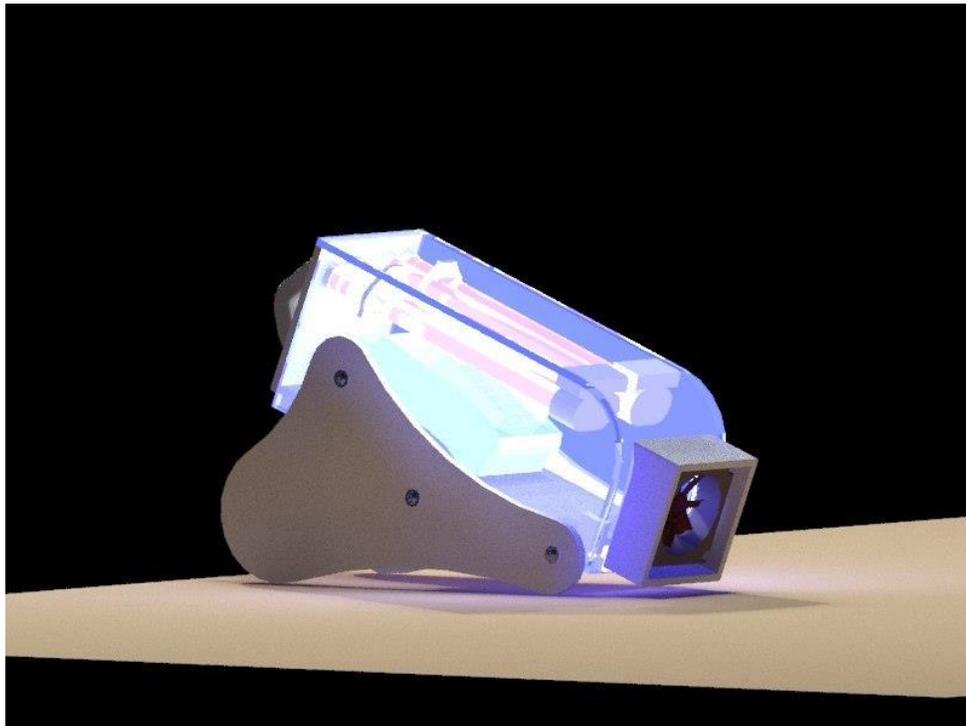

GETTING STARTED AND INITIATING A DISINFECTION CYCLE

1. After completing the setup instructions, the CM2 is ready for use.
2. Pull-out (Open) the front door.
3. Place your PIN pad on the tray.
4. Push the tray back into the unit to begin the disinfection process.
5. The green LED will indicate the start of the cleaning process.
6. Pull-out the tray, the PIN pad inside is disinfected and ready to use.



LIMITED ONE YEAR WARRANTY

Limited Warranty: Robonomist Inc. warrants the ASEPTICAN™ CM2 will be free from faulty workmanship or defective materials and conform to ROBONOMIST INC. applicable specifications or data sheets provided with the product for a period of one year from the date of purchase. Note: Disinfection lamps used in the ASEPTICAN™ CM2 are excluded from warranty due to their variable life expectancy.

Exclusions: The limited warranty is given only to the original purchaser of the ASEPTICAN™ CM2 and may not be transferred.

The warranty does not cover any cosmetic defects, problems or malfunctions not caused by the manufacturer. This includes issues stemming from power surge, misuse (including outdoor use), abuse, negligence, accidents, wear and tear, mishandling, misapplication, unreasonable intrusion or exposure to liquids, shipping or transit, improper or faulty installation, operation in a manner contrary to documentation provided to you with the ASEPTICAN™ CM2, operation on incorrect power supplies, third party products, modification, alteration, improper servicing or tampering. The warranty does not cover wear from the use of disinfection lamps in the ASEPTICAN™ CM2. In addition, the limited warranty will not apply for any ASEPTICAN™ CM2: that is opened, disassembled, maintained (other than routine maintenance done by or in behalf of the user as described in this manual) or modified by anyone other than ROBONOMIST INC. or any ROBONOMIST INC.-authorized third-party without ROBONOMIST INC.'s prior written approval; or whose serial number is defaced, altered or removed.

WARRANTY SERVICE

If the ASEPTICAN™ CM2 you purchased fails to perform as warranted and you notify ROBONOMIST INC. of the failure within the applicable warranty period and otherwise comply with all of the requirements below (“How to Obtain Warranty Service”), ROBONOMIST INC. or its authorized reseller will replace or repair the product(s) or,

if the product(s) cannot be repaired or replaced, ROBONOMIST INC. will refund the price paid for the defective product. Such repairs or replacement will be made at no charge to you for parts or labor, provided that you shall be responsible for any transportation cost. If ROBONOMIST INC. elects to repair or replace such products, ROBONOMIST INC. shall have a reasonable time to make such repair or replacement. Note: Repairs have a 90-day warranty. If the ASEPTICAN™ CM2 sent in is still under its original warranty, the new warranty is 90 days or to the end of the original one-year warranty, whichever is longer.

HOW TO OBTAIN WARRANTY SERVICE

To obtain Warranty Service, you must do the following:

1. Promptly notify ROBONOMIST INC. (416-821-3733 or support@ASEPTICAN.ca) upon discovery of the product(s)' failure to perform as warranted, with a detailed explanation of the problem and proof of the date and time of purchase.
2. Receive a Return Material Authorization (“RMA”) number from ROBONOMIST INC.
3. Notify ROBONOMIST INC. of the intended shipment date to allow ROBONOMIST INC. to arrange for shipment should ROBONOMIST INC. so desire.
4. Return the product(s) to ROBONOMIST INC. with the RMA number as directed by ROBONOMIST INC.

LIMITATIONS ON WARRANTY SERVICE

ROBONOMIST INC. will not provide warranty service if ROBONOMIST INC.'s examination of the returned product discloses that problems with the product do not exist or were caused by accident, misuse, abuse, mishandling, neglect, alteration, negligence, unauthorized repair or alteration by anyone other than ROBONOMIST INC. Specifically, and without limiting the preceding, warranty service will not be provided and the limited warranty shall be void if anyone other than ROBONOMIST INC. replace (or attempt to replace) the disinfection lamps or use the ASEPTICAN™ CM2 with any lamps other than those specified by ROBONOMIST INC. If warranty service is declined for any of the above, ROBONOMIST INC. will return the product to you at your expense. Any replacement or repair shall fulfill all of ROBONOMIST INC.'s responsibility to you under any legal theory, including, but not limited to, contract, tort, indemnity, statutory provision or otherwise.

LIMITATION OF REMEDIES

Except where prohibited by law, liability of ROBONOMIST INC. for an alleged defective product shall be limited to the replacement of the product or a refund of the purchase price, at ROBONOMIST INC.'s sole option. The foregoing constitutes buyer's sole and exclusive remedy, in lieu of all other remedies, for ROBONOMIST INC. furnishing defective or nonconforming products, materials, parts or service.

